



DRIVE WITH CLEAR SOUND

Enjoy hands-free phone calls in crystal clear sound with the Bluetooth[®] In-car Speakerphone

Driving the sound revolution


In-Car ambient noise is currently recognized as a big limitation to using in-car speakerphones as conversations can be unclear or hard to hear on both ends of the line. Jabra CRUISER, tackles in-car noise head-on so you can enjoy a clear and hands-free phone conversation. Jabra CRUISER is the revolutionary Bluetooth[®] In-car Speakerphone that is equipped with Dual Microphone technology. This technology is currently utilized in all of Jabra's high-end headsets, and has proven to drastically improve calling quality by eliminating background noise while enhancing voice. Thus, by successfully integrating dual microphone technology into Jabra's new Bluetooth[®] In-car Speakerphone, Jabra CRUISER is set to revolutionize the market!

Jabra CRUISER has many great additional features including it's voice announcements, which not only provide pairing instructions and connectivity and battery status information, but also accesses your address book to announce the name of inbound callers*. Jabra CRUISER is also equipped with an FM Transmitter, A2DP and AVRCP, which allow you to stream and control stereo music from your phone to your car or home stereo. Enhancing accessibility, the multiuse function allows Jabra CRUISER to connect two Bluetooth[®] devices simultaneously.

Reasons to choose the Jabra CRUISER

- Dual Microphones for excellent audio
- Get info via Voice Announcements™
- Play your music and take calls

* Contingent on phone

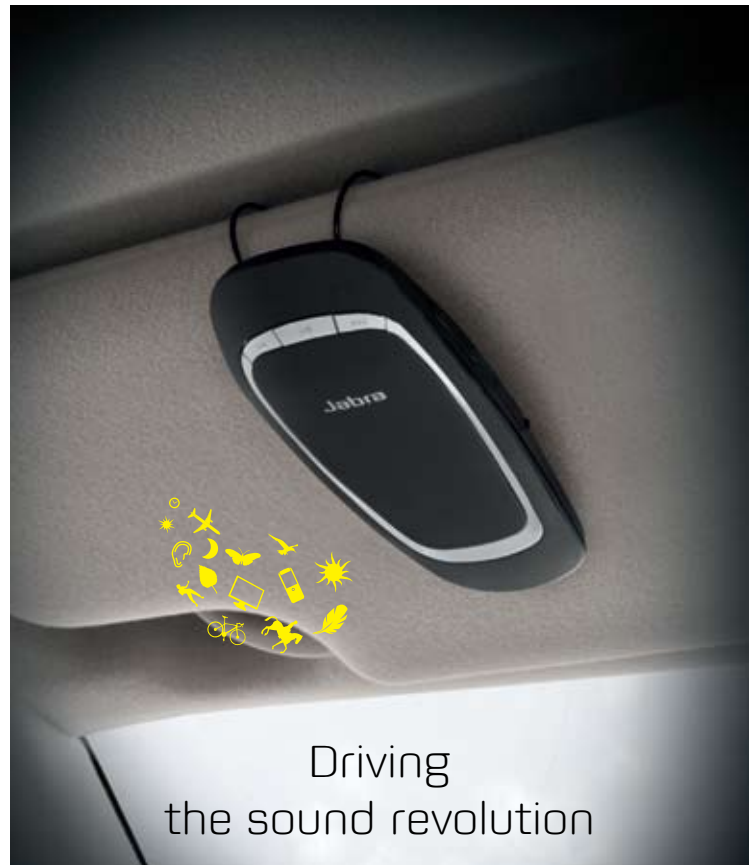

Driving
the sound revolution

A BRAND BY



JABRA[®] IS A REGISTERED TRADEMARK OF GN NETCOM A/S

Quick Start Guide

Charging your speakerphone

Insert charger and remove when fully charged and the Battery status icon turns green

Turning your speakerphone on and off

Slide the on/off button to turn the speakerphone on or off

Pairing the speakerphone with your phone

First time pairing:

Turn the speakerphone on and it will automatically be in pairing mode. The connection status icon will flash rapidly and "pairing mode" is announced.

Later pairing:

1. Turn the speakerphone on.
2. Press and hold the answer/end button (approximately 5 sec) until connection status icon flashes rapidly and "pairing mode" is announced.
3. Activate Bluetooth on your phone:
4. Search for Bluetooth® devices and select Jabra CRUISER
5. Press 'Yes' or 'OK' on the phone and confirm with PIN code 0000 (4 zeros)

Your phone will confirm when the pairing is complete

Using your speakerphone

Tap the answer/end button on your speakerphone to answer a call. To end your call, just tap the answer/end button again.


Using the FM transmitter

The FM transmitter in the speakerphone allows you to transmit calls and music from your phone to the car stereo.

1. Connect your phone and your speakerphone
2. Tap the FM button to enter FM mode. The FM status icon will turn solid red and a FM frequency will be announced.
3. Manually turn your radio into the same FM frequency and you are now ready to transmit calls or music from your phone to your car stereo.

Place the speakerphone in your vehicle

The Jabra CRUISER sits discreetly and conveniently on the sun visor.

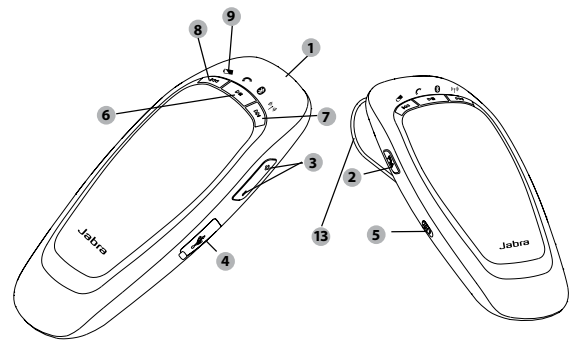

1) Answer/end button

Tap to answer/end call

2) FM button

Tap to enter FM transmission mode

3) Volume up/volume down button

Tap volume up and down to adjust the volume

4) Charging socket

Easy charging with USB and Car Charger power supply provided

5) On/off button

Slide to turn the speakerphone on or off

6) Play/pause/stop button

Tap play/pause/stop button to play or pause music.

Press (approximately 2 sec) to stop music

7) Next track button

Tap to skip to next track

8) Previous track

Tap to skip to previous track

9) Status icons

Shows status on battery, calls, connection and FM transmission

Features and Specifications

1. Dual microphone technology for optimized noise and echo cancellation – drive with clear sound
2. Get info with Voice Announcements™ in local languages incl. incoming caller identification and pairing instructions*
3. Stream and control your music and calls remotely
4. Multiuse™ – connect 2 devices at the same time
5. FM transmitter – stream your calls and music to the car radio
6. StatusDisplay™ – battery status, call status, connection status, FM status
7. Auto off – saves battery
8. Night Driving Mode – no interfering light while driving at night
9. Auto-pairing for no-nonsense set-up
10. No installation needed – just put it on the visor!
11. Up to 14 hours talk time and up to 13 days standby time
12. Weighs only 85g.
13. L 127 x W 62 x H 17 mm (L 5.0 x W 2.4 x H 0.7 in)
14. Bluetooth® technology - clear sound with Bluetooth 2.1 w. EDR, eSCO, A2DP**, AVRCP*** and PBAP
15. Features answer/end, redial****, reject calls****, mute and voice dial****
16. Comes with USB cable, Car charger (CLA) and clip for visor

* Default languages: English, German, Spanish, French, Russian. Download from website: Italian, Portuguese, and Chinese

** An A2DP enabled phone is required to transfer music from phone to the speakerphone

*** An AVRCP enabled phone is required to remote control the music from the speakerphone

**** Phone dependent

Freephone customer support numbers:

Denmark	Phone: 70252272	E-mail: support.no@jabra.com
Finland	Phone: 00800 722 52272	E-mail: support.no@jabra.com
Italy	Phone: 800 786543	E-mail: support.it@jabra.com
Norway	Phone: 800 61272	E-mail: support.no@jabra.com
Spain	Phone: 900 984 542	E-mail: support.es@jabra.com
Sweden	Phone: 020792522	E-mail: support.no@jabra.com
UK	Phone: 0800 0327026	E-mail: support.uk@jabra.com

A BRAND BY



JABRA® IS A REGISTERED TRADEMARK OF GN NETCOM A/S